



SHARP Content Distributor for FlashAir Setup tool Operation Manual

Introduction

To use SHARP Content Distributor for FlashAir, an application must be added to FlashAir using this software.

Glossary

- This manual explains how to use SHARP Content Distributor for FlashAir Setup tool.
- The following terms are used in this manual.

Device	Computer, tablet, or smartphone for use of SHARP Content Distributor for FlashAir.
Panel	LCD Monitor
Content (files)	A video or image file to be displayed or played on a panel. Please prepare content files yourself. Only the content stored in terminals can be used.

1. Applicable models

OS	Windows 7 (32-bit or 64-bit version), Windows 8.1 (32-bit or 64-bit version), Windows 10 (32-bit or 64-bit version)
Memory	At least 2 GB
Monitor	1280 ×1024 dots or higher
FlashAir	Toshiba W-03 or later

*Please use a computer that is equipped with wireless LAN.

*Please use computer with built in SD Card reader or attach external SD reader.

2. Preparations

Begin by extracting “SetupTool_Cdist-forF_x.x.x.x.zip” to any folder. Insert FlashAir in your computer, and run the Setup Tool (Cdist-SetupTool.exe).

3. Procedure

- 1) Insert FlashAir in the computer or into the SD card reader.
- 2) Select the FlashAir drive letter to be set up.
 - If FlashAir does not appear, re-execute the Setup Tool.
- 3) Setup wireless LAN on FlashAir.
 - The default SSID is [FlashAirSharp]. You can set the SSID using 1 to 32 alphanumeric characters.
 - The default password is [12341234]. You can set the password using 8 to 64 alphanumeric characters.

- You can select [Wireless LAN auto stop time] from among of “Do not stop” (default), 5, 10 and 30 minutes. If devices do not connect to FlashAir within the specified time-out period, wireless LAN is automatically disconnected.
- 4) After Setup is selected in SSID configuration, setting up activity screen will appear. Once complete, remove FlashAir from your computer and then reinsert.
- In some cases, it may be necessary to remove and insert FlashAir twice.
- 5) Check the connection to FlashAir.
- Insert FlashAir in your panel, and confirm panel is turned ON.
 - In the wireless settings of the device that you will use to add content, connect to the SD card SSID.
- ※The connection in this case does not have an Internet access.
- ※If you are using Android, a message to confirm network connection may be displayed. In that case, please keep the current connection.
- Enter to the following address into your browser. <http://flashair/>
 - Make sure that the SHARP Content Distributor for FlashAir page appears.



4. Caution

- To use this software, .Net Framework 4.5.1 is needed.
- If wireless LAN disconnects, turn the panel power off and then on. If [POWER SAVE MODE] is set to [ON] in the panel settings, you can also restart with the remote control.

5. Trademarks

- Microsoft, Windows and .Net Framework are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

- FlashAir is a trademark of Toshiba Corporation.
- The trademark, Android, is used under license from Google Inc.

