

WT600 User's Manual Supplement

This document provides updated information that supplements the WT600 User's Manual. **Read this supplement as well as the User's Manual.**

1 Correction to “What’s in the Box?”

Although a Quick Connect Guide is shown on page iii of the user's manual, the WT600 SETUP GUIDE is actually included with the projector.
First read the WT600 SETUP GUIDE before operating the projector.

2 Change in [3D Reform] Operation

The procedures in the user's manual are different from the actual operation. See the correct procedures below.

- (1) Change in layout of menu items (page 6-3 of the user's manual)
The menu options in 3D Reform has been changed to:

[User's manual]			[Actual menu display]	
Cornerstone		➔	Pincushion	Left/Right, Top, Bottom
Keystone	Horizontal, Vertical		Cornerstone	
Pincushion	Horizontal, Vertical, Balance (Vertical)		Keystone	Horizontal, Vertical

With this change, the order in displaying adjustment screens is the same order as the above when the 3D REFORM button on the remote control is pressed: Pincushion → Cornerstone → Keystone → Pincushion → ... (page 1-4 and 1-7 of the user's manual)


- (2) Change in [Pincushion] operation (page 6-13 of the user's manual)
The procedures for [Pincushion] correction is changed as:

Pincushion




[Left/Right]

Correct the left and right side on a projected image to level as shown the drawing.

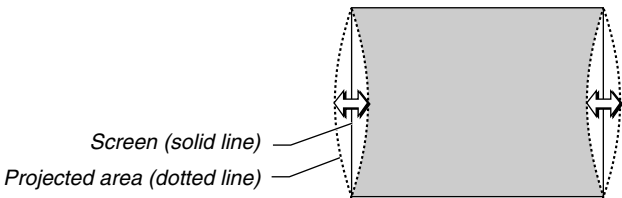


[Top]

Correct the top side on a projected image to level as shown the drawing.

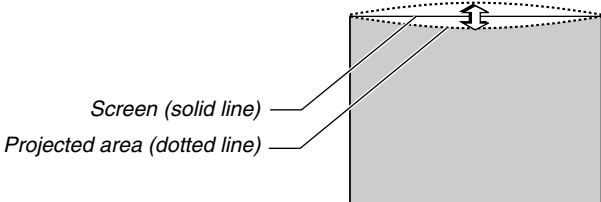

[Bottom]

Correct the bottom side on a projected image to level as shown the drawing.

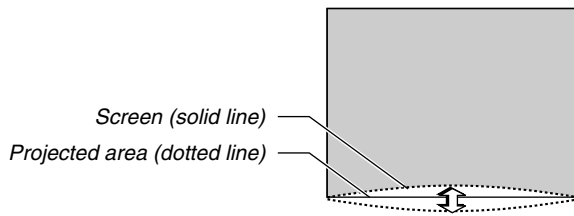

NOTE:

- In the [Pincushion] screen, when the [Top] adjustment value is "0", adjustment of [Bottom] will not be possible* . Also note that when the adjustment value of the [Top] is a small value (on the order of +5), there will be almost no change of the image even when the [Bottom] is adjusted*.
 - In [Pincushion] screen, when the [Bottom] adjustment value is less than "0", a small portion can be lost at the bottom area of the image. To display the lost portion, use the [Digital Zoom] function to reduce the size of the projected image.*
 - When [Cornerstone] or [Keystone] has already been adjusted, selection of [Pincushion] will not be possible. To display [Pincushion], return the adjustment values of [Cornerstone] or [Keystone] to the factory shipping conditions.
- * Each note for [Top] and [Bottom] is reversed when the [Ceiling Rear] or [Ceiling Front] is selected in [Orientation]

3 Idle and Standby mode

Information on the Idle and Standby mode is revised as follows:

- (1) The correct factory default is "Idle" mode, not Standby. (page 6-17 of the user's manual)
- (2) The current explanation states that Factory Default option resets Idle to Standby, but actually using the Factory Default will not return the Idle mode (factory preset) to Standby. (page 6-25 of the user's manual)